

## ***Low Profile Flower Merchant***

*The ultimate in floral protection, featuring Floratech's patented "Boundary Layer" airflow technology. This Low Profile cooler is available in many lengths and, can be arranged with various dry sections to form walk-around islands, counter or wall units.*





*Shown with select options*

### ***Standard Features***

- Open front and top promotes impulse buying
- Modular design; can be combined with other displays to form endless configurations
- Highest capacity, with smallest footprint, of any low profile floral cooler in the industry
- Patented "Boundary Layer" airflow technology directly cools vases and gently envelops flowers
- Angled return air grille prevents debris from entering the cooling system
- Top condenser air inlet minimizes dust entrapment on condenser coil, reducing maintenance
- Power cord provided for safe and easy set-up
- Thermostatically controlled with an automatic "on demand" defrost cycle
- Mounted on 4 lockable swivel casters for easy service or relocation
- Bumper on front protects from shopping carts
- Matte black exterior and interior are standard
- High density laminated panels and powder coated aluminum components for durability
- Oversized evaporator coil minimizes moisture removal, keeping relative humidity high
- Automatic condensate removal, no drains required
- Ozone friendly 404a refrigerant; R22 available

### ***Options***

- Curved side windows
- Special finishes and colors in gloss or matte
- Vase hole covers for arrangements or Procona shelving
- Light fixture with or without "Fresh Flowers" sign
- Matching dry sections on ends and sides for additional merchandising
- Remote refrigeration system
- Glass grille and corner guards

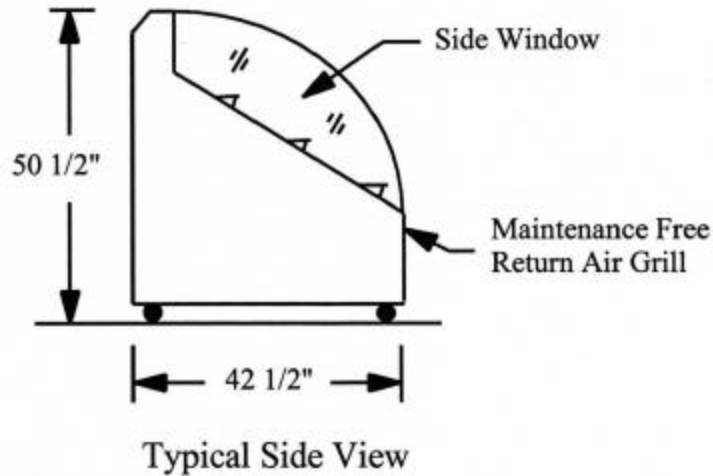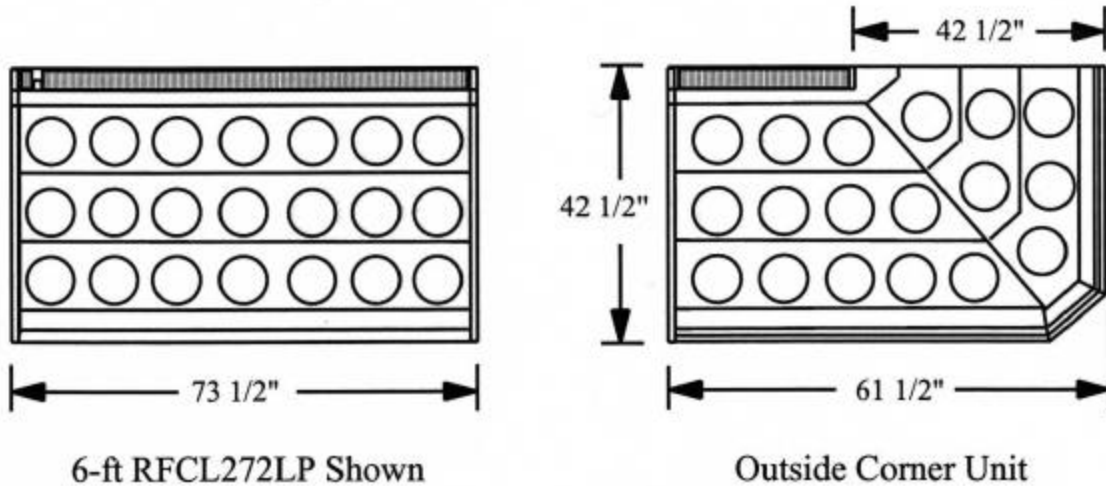

## Specifications



Model	Width	Height	Depth	Ship (lbs)	Unit HP	Electrical	Amps	Approved to UL471 and CSA C22.2
RFCL248LP	49 1/2"	50 1/2"	42 1/2"	500	1	208-230/115/60/1	30	(15) 9" x 10" round
RFCL260LP	61 1/2"	50 1/2"	42 1/2"	600	1	208-230/115/60/1	30	(18) 9" x 10" round
RFCL272LP	73 1/2"	50 1/2"	42 1/2"	800	1	208-230/115/60/1	30	(21) 9" x 10" round
RFCL296LP	99"	50 1/2"	42 1/2"	1000	(2) 1	208-230/115/60/1	(2) 30	(30) 9" x 10" round
RFCL2120LP	123"	50 1/2"	42 1/2"	1200	(2) 1	208-230/115/60/1	(2) 30	(36) 9" x 10" round
RFCL2144LP	147"	50 1/2"	42 1/2"	1600	(2) 1	208-230/115/60/1	(2) 30	(42) 9" x 10" round

The **Low Profile Flower Merchant** is designed for use in air conditioned areas having a maximum temperature of 75°F or maximum relative humidity of 50%. Floratech reserves the right, without notice, to make changes to this document at its sole discretion.

Unit covered by Patent No. 400,030 & 5,860,289

**Always Open®** Impulse merchandisers      **Classic** Full service merchandisers  
 7000 Performance Drive • N. Syracuse, NY 13212 • 800-535-3295 • 315-452-7440 • Fax 315-452-7420 •

Website: [www.floratech.net](http://www.floratech.net)

rev. April 2005